
## FOYER ELECTRIQUE NAPOLÉON

La télécommande devrait être dans la table de chevet du côté du garde-robe dans le tiroir attacher sur un velcro sur la façade.

ATTENTION : Utiliser préférablement avec le timer ou ne pas oublier de le fermer après usage.

The remote should be in the bedside table on the side of the wardrobe in the drawer attach on a Velcro on the front.

CAUTION: Use preferably with the timer or do not forget to close after use.

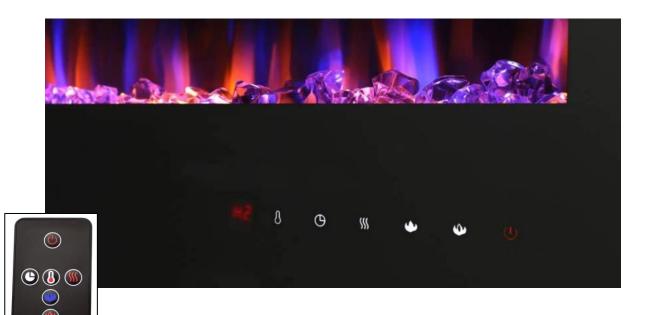

POWER	(4)	Turns the appliance ON/OFF.
FLAME - ORANGE	<b>(4)</b>	Controls Orange Flame brightness. <b>6 Settings:</b> F5-F4-F3-F2-F1-F0. Flame dims from F5 to F1. F5 is the brightest setting and F0 is off.
FLAME - BLUE	<b>(a)</b>	Controls Blue Flame brightness.  6 Settings: F5-F4-F3-F2-F1-F0. Flame dims from F5 to F1. F5 is the brightest setting and F0 is off
HEATER		Turns the heater ON/OFF.  (H0) - No heater or blower.  (BL) - Blower only.  (H1) - Heater blows warm air (750W).  (H2) - Heater blows hot air (1500W).  NOTE: Heater functions cycle from H0-BL-H1-H2. Press and hold the heater button for 5s to lock the heater and temperature setting onto the selected setting. Hold the button for another 5s to unlock the heater and temperature setting.
TIMER	(1)	Turns the timer ON/OFF.  9 Settings: 0.5h, 1h, 2h, 3h, 4h, 5h, 6h, 7h, 8h. Press button until desired setting is reached.
TEMPERATURE		Press once to turn the touch panel indicator ON.     Press button until desired setting is reached. Digital display shows setting circles as follows:      Display Value