


LIGHT SWITCH AND KEYPAD

Tous les interrupteurs de l'unité sont soit avec détecteurs de mouvements ou soit avec la technologie INSTEON avec gradateur. Pour les Keypad, les noms des pièces ou des scènes sont bien notés pour vous aider. Par exemple, le « ALL OFF » de l'entrée permet de tout fermer les lumières avant de sortir du condo.

All the switches on the unit are either with motion detectors or with INSTEON technology with dimmer. For Keypads, the names of the rooms or scenes are well noted to help you. For example, the "ALL OFF" of the entrance allows all lights to be turned off before leaving the condo.

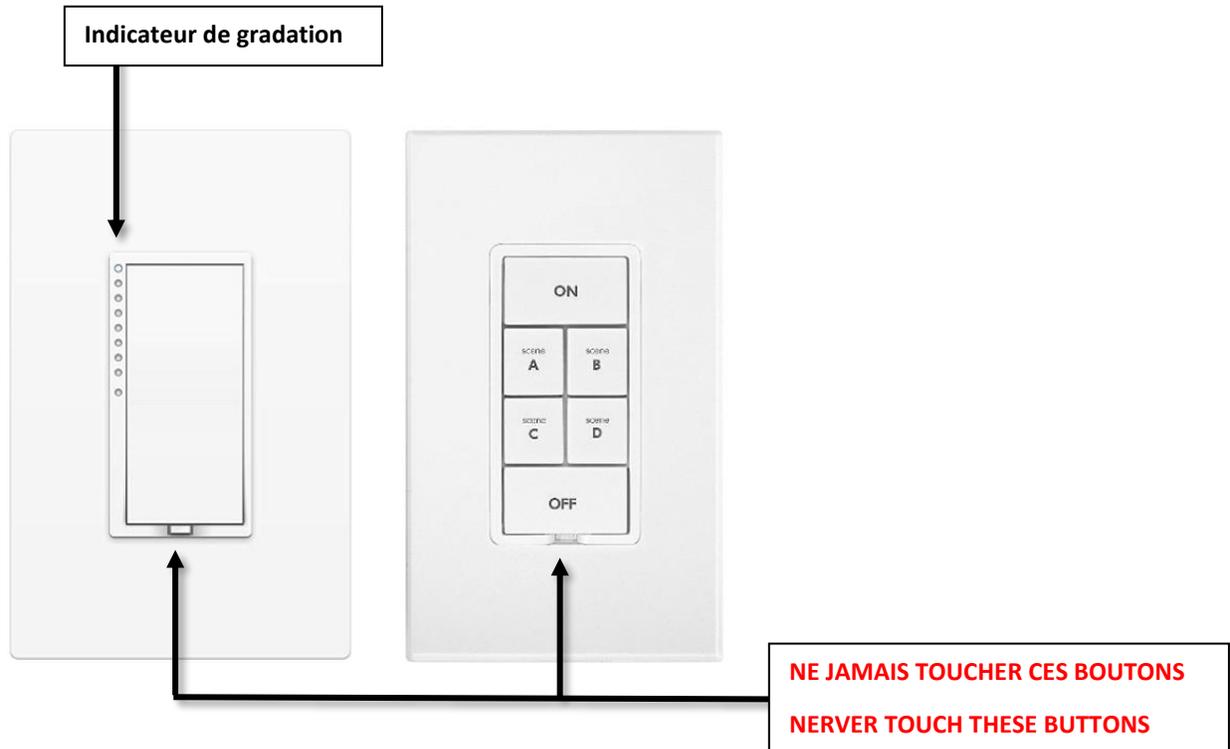

Pour utiliser le GRADATEUR, garder le doigt appuyé (haut ou bas selon le besoin) jusqu'au niveau d'éclairage souhaité. Si vous appuyez une seule fois rapidement, le niveau par défaut s'activera. Vous verrez sur le côté les petites lumières qui indiquent le niveau de gradation.

Le même principe fonctionne sur les Keypad si vous gardez le bouton enfoncé, mais sans indicateur lumineux de gradation.

À noter que certaines ampoules LED ne permettent pas la gradation.

To use the DIMMER, keep your finger pressed (up or down as needed) to the desired lighting level. If you press once quickly, the default level will activate. You will see the little lights on the side that indicate the dimming level.

The same principle works on Keypads if you keep the button pressed, but without an indicator light for dimming.

Note that some LED bulbs do not allow dimming.